



BS-6200 Hay Bale Un-roller Use and Maintenance



READ BEFORE USING THE BALE UN-ROLLER

1. THE SWING ARM SHOULD BE PINNED IN PLACE WHEN BEING USED AS A STANDARD HAY TINE
2. PUSH THE JOY STICK ON YOUR LOADER TO THE "FLOAT" POSITION WHEN UNROLLING THE BALE
3. OPERATE THE HYDRAULIC CONTROL SLOWLY TO PREVENT THE BALE FROM SLIDING OFF THE HAY TINE
4. THE CYLINDER USES 3/8" NPT MALE COUPLINGS
5. WHEN ROUTING THE HOSES, MAKE CERTAIN THERE ARE NO PINCH POINTS AND THE HOSES HAVE ENOUGH LENGTH TO ALLOW THE RAISING OF THE FRONT END LOADER
6. HOSES MAY BE ATTACHED TO A SWITCH-OVER ON THE JOY STICK OR TO THE AUXILIARY HOOKUP
7. GREASE THE SWING ARM EVERY 15 DAYS WHEN THE SWING ARM IS USED HEAVILY AND AT THE BEGINNING OF EACH FEEDING SEASON
8. MAXIMUM CAPACITY, 2100 LBS.

1. **NEVER** OPERATE THE SWING ARM WITH THE HAY BALE MORE THAN 6" FROM THE GROUND
2. THERE IS A **CRUSHING** AND **IMPALING** HAZARD, ALWAYS STAY CLEAR OF THE SWING ARM
3. IT IS RECOMMENDED THAT COUNTERWEIGHTS BE ON THE REAR OF THE TRACTOR WHEN USING THE UN-ROLLER TO PREVENT ROLLOVER
4. **NEVER** USE THIS UN-ROLLER ON TRACTORS LESS THAN 45 HP
5. THE ARM SHOULD BE SLIGHTLY TO THE LEFT (APPROX. 10°) FROM CENTER WHEN UNROLLING FORWARD
6. THE ARM SHOULD BE SLIGHTLY TO THE RIGHT (APPROX. 10° - FULL EXTENSION OF THE CYLINDER) WHEN UNROLLING IN THE REVERSE DIRECTION

